


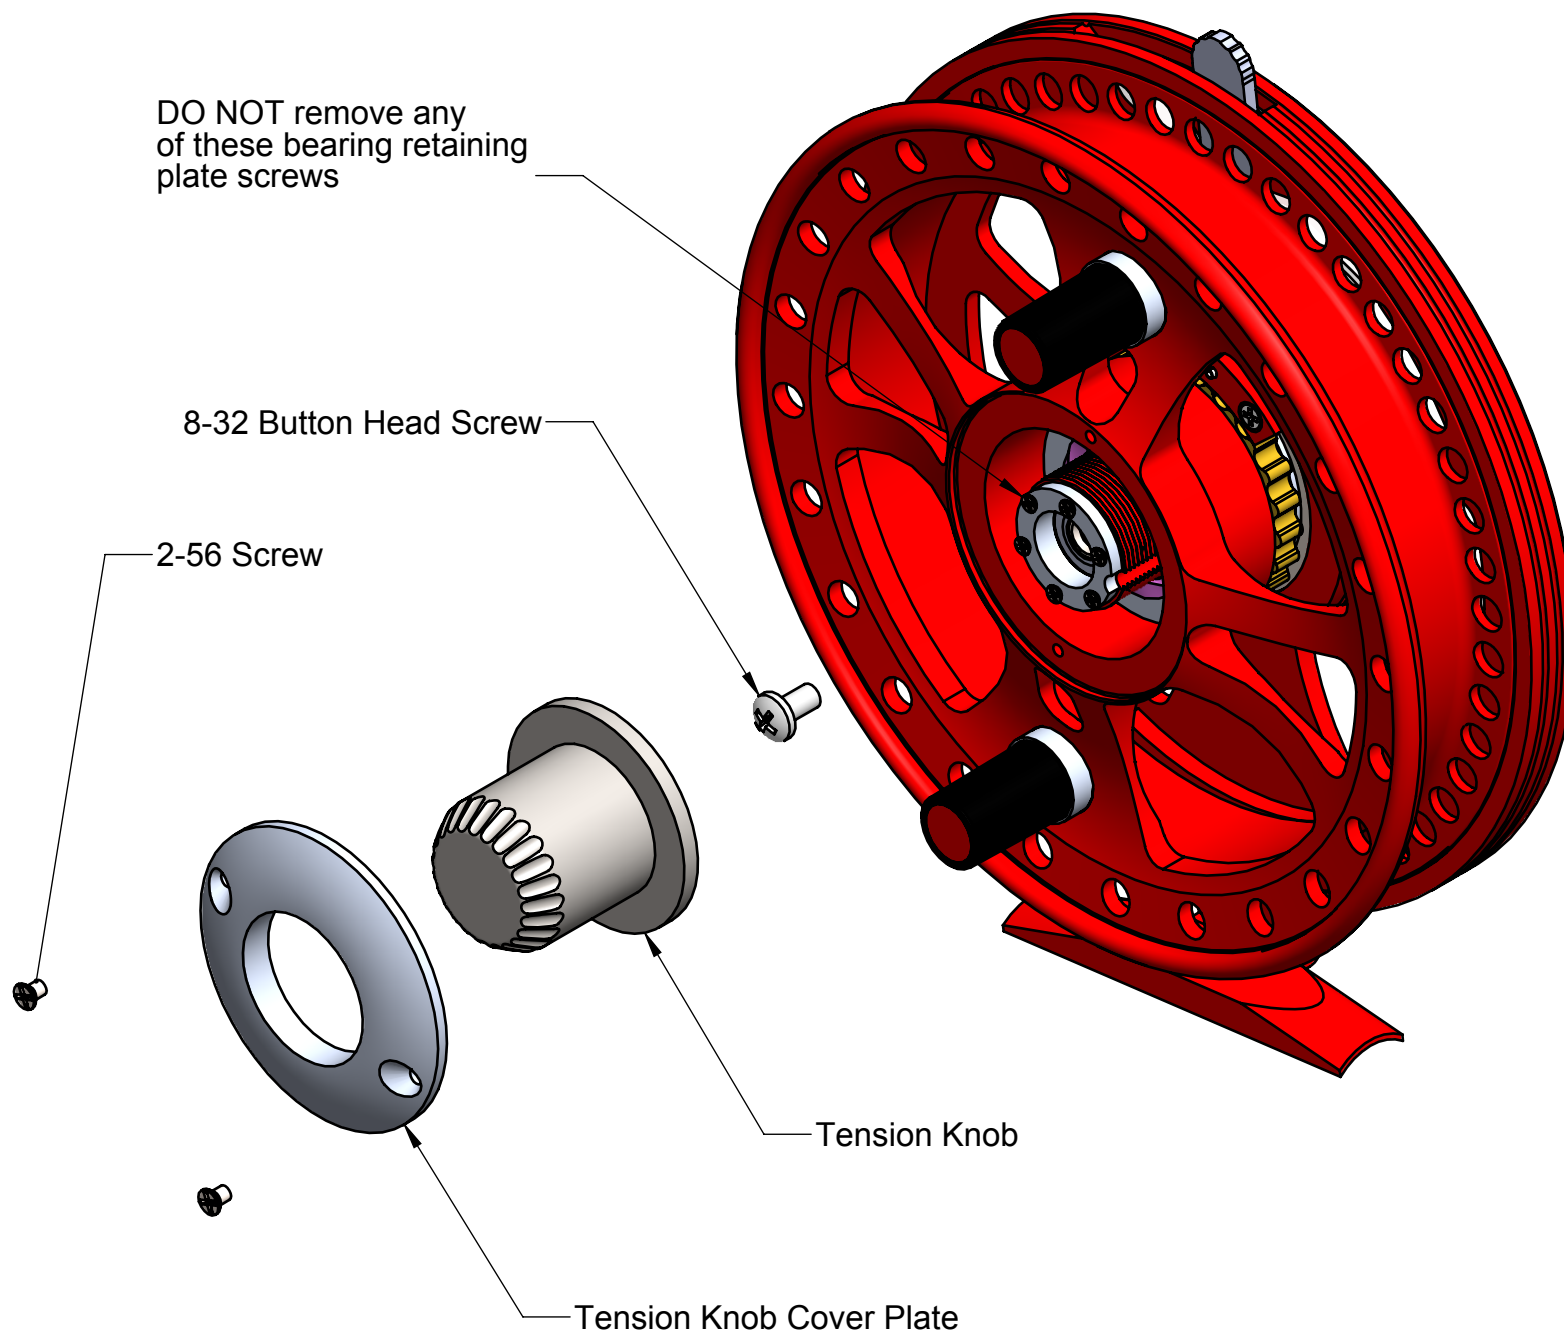

DO NOT remove any
of these bearing retaining
plate screws

8-32 Button Head Screw

2-56 Screw

Tension Knob

Tension Knob Cover Plate